



Exterior Wood Cleaner
Removes dirt and stains

Technical_Data_Sheet_Label

03.03.2021 - p. 1/2

Exterior Wood Cleaner was developed for the thorough cleaning of all types of wood surfaces, such as terraces, garden furniture, fences, canopies, doors and windows. The product quickly and efficiently dissolves dirt, thereby assuring an optimal surface for subsequent treatment.

- **Removes moss and algae growth, prolongs resettlement**
- **Suitable for decking, garden furniture, cladding and siding**
- **Manual or mechanical cleaning**
- **Not harmful to vegetation**
- **No need for pressure washing. Cleaning with WOCA Exterior Cleaner forces less moisture into the wood than pressure washing**



AppArea

For new and old wood. Ideal for surfaces such as garden furniture, terraces, fences, canopies, window frames, doors and carports. Can also be used on masonry and concrete.

Work_Descrip_Label

Preparation_Label Treatment should only be performed in dry weather conditions. Avoid direct sunlight and excessive heat. Remove all loose foliage, branches, etc. and then soak the wood with water. Use a garden hose if possible.

Always remember to test on a less visible spot to check the compatibility of the surface with the product.

Treatment Mix Exterior Wood Cleaner with water in a ratio of 1:2 - 1:10, depending on how dirty the wood is. Apply the cleaner in an even coat, using a brush or spray nozzle. Leave the cleaner to work for five minutes. Scrub in the longitudinal direction of the wood grain using a stiff-bristled brush, until the surface is clean. We recommend WOCA's silicon brush or terrace brush for the best results. Rinse the surface with plenty of water and leave the wood to dry for 24-48 hours. The wood must be completely dry before after treatment with oil, paint or impregnation. If a completely smooth surface is desired, any uneven wood fibres can be removed with sandpaper grit 180-240 before oiling.

NoteTxt Exterior Wood Cleaner can also be used on masonry and concrete.

DryingTime

DryingTime 24-48 hours.



Exterior Wood Cleaner
Removes dirt and stains

Technical_Data_Sheet_Label

03.03.2021 - p. 2/2

Techdata_label

Density	1 to 1.1 g/cm ³ .
PHVvalue	10-11
ShelfLife	36M
AppTemp	+59-86°F.
Consumption	Approx. 60-100 sq.ft./L
MixingRatio	1:2 - 1:10, depending on how dirty the wood is.
Storage	+50-77°F. Keep out of reach of children. Do not expose to heat (e.g. sunlight). Store frost-free during winter and cool during summer (max. +77°F).
AvailPotSizes	33.81 fl.oz. - 84.54 fl.oz.

MaintenanceProd

RelatedProducts	Exterior Wood Oil, #6179XX
ApplicationTool	Brush or spray nozzle Terrace brush, #88055 Patio scrubber, #599601 Telescopic handle 115-197 cm, #599651

Contact_Label

WOCA Denmark A/S
Tvæervej 6
DK - 6640 Lunderskov
T +45 9958 5600
info@wocadenmark.com
wocadenmark.com

Disclaimer_Long